



ANGLE*WALL BERMS DEPLOYMENT INSTRUCTIONS

- 1) Select a site approximately 6 feet larger in each direction than the empty berm size. The slope of the site should not exceed three degrees in any direction. Clear the site of all sticks, stones or other sharp objects that may damage the berm.
- 2) The grade and the floor of the berm should slope slightly towards one edge to direct rain water to the fill/drain fitting that should be located at the low point.
- 3) Remove ground sheet from packaging material, unfold and place in middle of cleared area.
- 4) Remove berm from packaging material and unfold. Starting from the center of the ground sheet outwards.
- 5) Sidewall support for the Angle*Wall berms is provided by permanently attached exterior angle wall brackets. Deploy the brackets by applying downward hand pressure to each hinged metal flapper.



Warning: Do not store combustible or flammable liquids in Firetak products. User is responsible for their own safety as there is a slight potential for drowning and/or suffocation