



## **FIRETAK DECON TANKS**

### **DEPLOYMENT INSTRUCTIONS**

- 1) Remove tank from carrying/storage bag.
- 2) Unfold until the base (beige) material is fully extended.
- 3) Remove the rubber protective cap from the air valve.
- 4) Use an S.C.B.A. cylinder to inflate the collar. Place one hand behind the air collar valve and insert the valve into the concave section of the air cylinder valve. Open the cylinder valve slowly and inflate collar. After a tank has been stored for some time there may be slight kinks in the collar after the initial inflation. If so, straighten these out by hand and then add a little more air pressure. Repeat this procedure until the collar is completely round. Approximately 25 - 30 P.S.I. is adequate to complete inflation and over pressurization is avoided by using this indirect connection method.

**WARNING:** *DO NOT USE ANY DIRECTLY CONNECTED AIR SUPPLY FOR COLLAR INFLATION. EXCESSIVE PRESSURE COULD RUPTURE THE INNER AIR CHAMBER WHICH IS PROTECTED FROM EXTERNAL DAMAGE BY THE OUTER (VISIBLE) COLLAR.*

- 5) Replace the rubber dirt cover.

..... Continued

**AFTER USE :**

- 1) Do not remove the rubber dirt cover. To release the collar air pressure, slowly turn the dirt cover counter clockwise. The valve beneath the cover will turn with the dirt cover.
- 2) After most of the air has been exhausted, remove the dirt cover/valve combination completely.

***NOTE: IF THE "O"RING INSIDE THE VALVE SHOULD  
DISLODGE, REPLACE WITH THE EXTRA "O" RINGS PROVIDED.***

- 3) Drain all remaining liquids from the tank, clean, inspect and repair if necessary. Tank may be hung from the bottom strap for cleaning and drying.
- 4) After drying, fold and roll. Roll toward the air valve. This will ensure that all remaining air is evacuated.
- 5) Secure the retaining straps and replace valve/dirt cover.
- 6) Place tank into carrying bag.

Warning: Do not store combustible or flammable liquids in Firetak products. User is responsible for their own safety as there is a slight potential for drowning and/or suffocation.

**FIRETAK MANUFACTURING LTD. 1497 Dublin Avenue, Winnipeg, Canada R3E 3G8  
Ph: 1-800-475-5734/204-975-0334, Fax:204-975-0337 E-Mail: [info@firetak.com](mailto:info@firetak.com) [www.firetak.com](http://www.firetak.com)**